



DEFINE YOUR OWN LIGHTING MODE AND COLOR

Stepless brightness
regulation



Rotate the switch to smoothly and
precisely activate the desired light
mode for a variety of scenarios.



Stepless color
temperature regulation



The rotary switch offers simple
one-handed operation of user-defined
color temperature selection.

* Color temperature: 2700K - 6500K

Outdoor work



Campsite lighting



BRIGHT AND BRILLIANT LIGHT FOR A VARIETY OF SCENARIOS

The CL28R provides you with 2000 lumens of output to perfectly meet the needs of a variety of tasks. Cool white light for improved vision, warm light for a cozy incandescent bulb feel and neutral white light that mimics natural daylight.

Vehicle repair



Electrical maintenance



Emergency use



USB TYPE-C FAST CHARGING



The USB Type-C charging port allows for PD 5V/2.5A, 9V/2A, 12V/1.5A fast charging and supports adapters that meet fast charging protocol.



4 HOURS
CHARGE
360 HOUR
ULTRA-LONG
RUN TIME



Fast charge the 10000 mAh built-in battery in 4 hours*, it powers the light with an ultra-long runtime of 360 hours**



10000 mAh
capacity

* The test results were produced by Fenix through its laboratory testing. The actual charging effect may vary according to different devices.

** 10-lumen mode can be continuously used for 360 hours, with lasting illumination of 45 days by 8-hour use per day. Test results produced by Fenix through its laboratory testing are for reference only.



360
hour ultra-long runtime

POWER BANK FUNCTION - CHARGE OTHER DEVICES



The CL28R has both USB-C and USB-A discharging ports for charging your portable digital devices, giving you peace of mind even if your phone is running out of power.




EYE-CATCHING RED LIGHT - A MUST-HAVE FOR DAY OR NIGHT




The red light has the characteristics of not attracting mosquitoes and bees, helping to preserve your night vision, and the red flash offers high visibility to vehicles and fellow travelers, providing for safer activities in the dark.

Work lighting

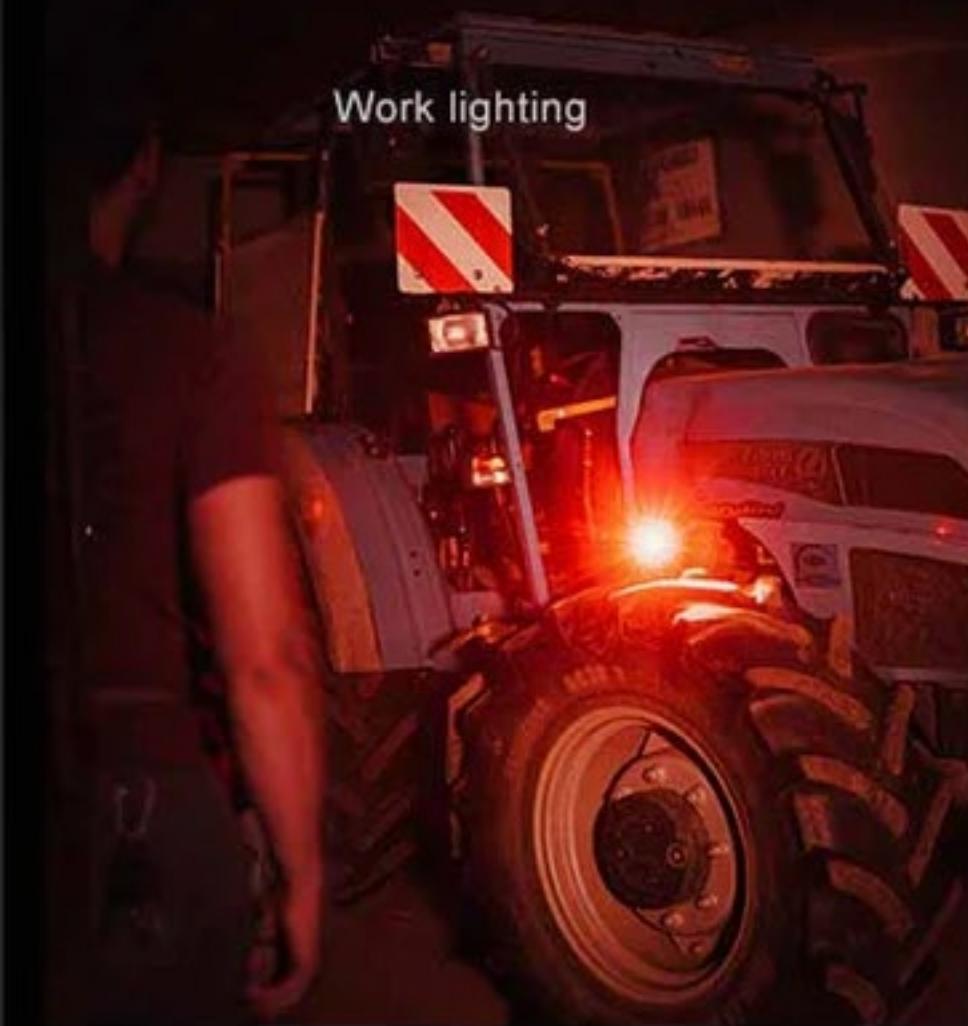

Emergency signaling

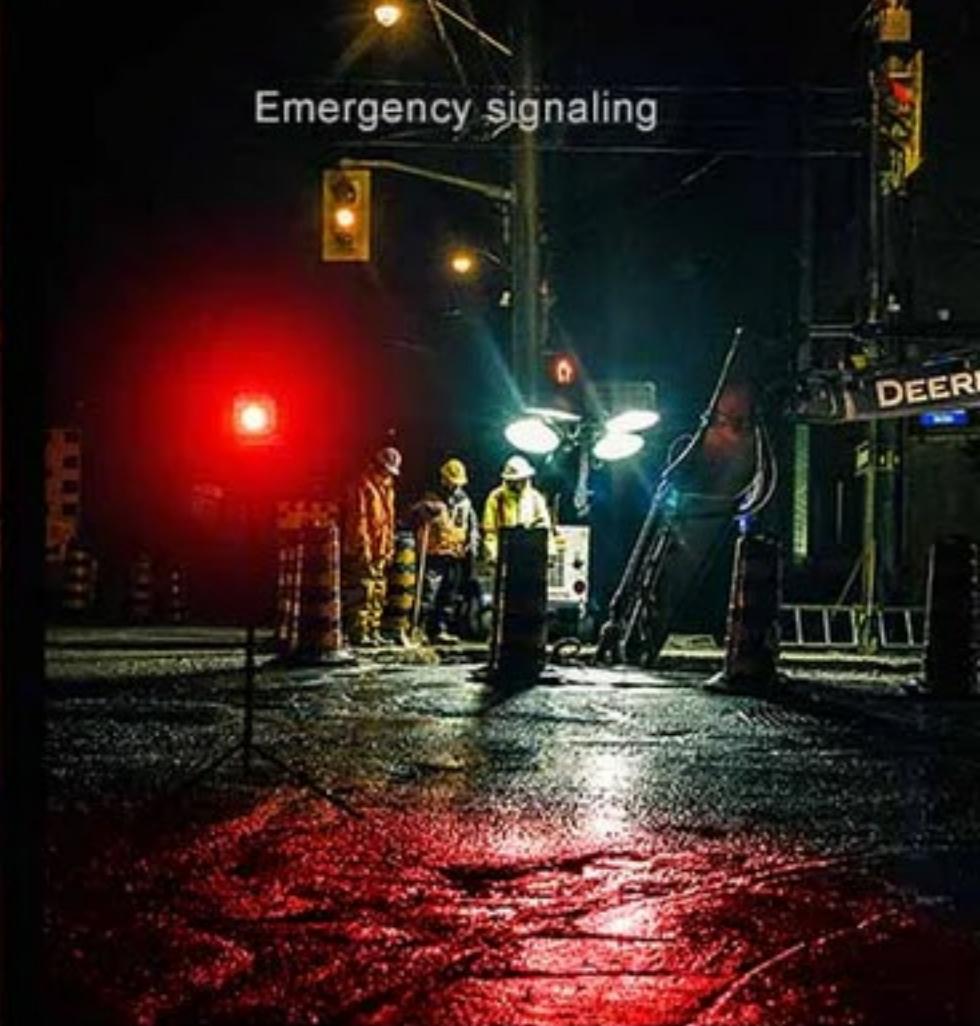

Night reading



**360°
ADJUSTABLE
HANDLE**



360° adjustable

The 360° adjustable handle greatly expands the possible illumination area. Therefore, you can see clearly where you need it and when you need it.



HANDS-FREE MOUNTING WITH THE MAGNETIC HANDLE



The lantern includes a built-in magnetic handle which allows you to affix the light to most metal surfaces, leaving both hands free for the task to be completed.



TRIPOD SOCKET FOR MORE FLEXIBLE USE



Use the standard tripod socket to attach the lantern to a variety of photography/shooting/survey tripods to steadily direct the light where you need it. Plus the 160° wide beam angle is great for use in camping and photography.

* Tripod purchased separately.

160°
wide beam angle




STURDY BODY FOR PHYSICALLY CHALLENGING ACTIVITIES



Rugged and reliable, even when subjected to extreme conditions. It can withstand a drop test of 1.5 meters on all 6 sides.*



1.5 meters drop test



High-hardness and impact-resistance

* The 1.5-meter drop test results were produced by Fenix through its laboratory testing.



IP66 RATED PROTECTION

Fully protected against dust
and foreign object intrusion.
Heavy rain and splashing water
won't cause any damage.



TECHNICAL PARAMETERS

SIZE: 3.94" x 3.82" x 1.61" / 100 x 97 x 41 mm.

WEIGHT: 13.26 oz / 376 g (including battery).

	WHITE LIGHT			RED LIGHT	
	HIGH	MED	LOW	RED CONSTANT-ON	RED FLASH
☀️ OUTPUT	2000 lumens	1000 lumens	10 lumens	9 lumens	9 lumens
⌚ RUNTIME	9 hours *	10 hours	360 hours	170 hours	340 hours
➡️ DISTANCE	58 meters	42 meters	4 meters	4.5 meters	/
💡 INTENSITY	880 candela	440 candela	3.8 candela	4.6 candela	4.6 candela
⬇️ IMPACT RESISTANCE			1.5 meters		
💧 WATER RESISTANT			IP66		

Note: The above specifications are from the results produced by Fenix through its laboratory testing using the 2 x 5000mAh batteries under the temperature of 21±3°C and humidity of 50% - 80%. The true performance of this product may vary according to different working environments and the actual battery status.

*The High output is measured in a total of runtime including output at reduced levels due to the temperature or protection mechanism in the design.

INCLUDED



Fenix CL28R
outdoor lantern



USB Type-C
charging cable



Key chain



User manual



Warranty card

Package size:

6.70" x 5.35" x 2.01" / 170 x 136 x 51 mm

* The data is from the results produced by Fenix through its laboratory testing. Actual results may vary slightly according to the measurement method in the industry.